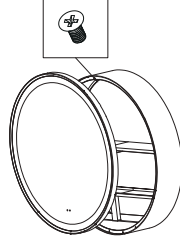
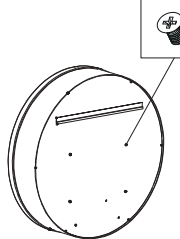
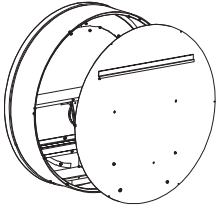
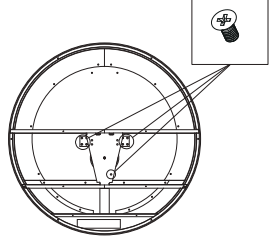
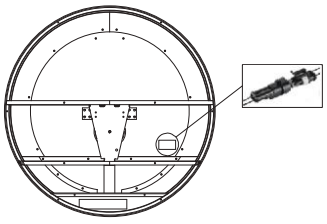
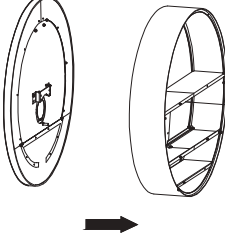
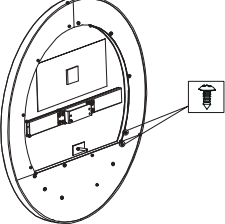
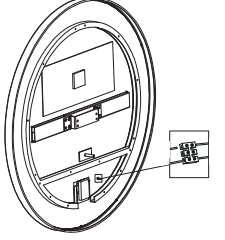










LED driver and LED strip removal instruction manual



This product contains a light resource of energy efficiency class <F>.


1. Remove the LED strip

 <p>1. Push the door ,remove the screw connecting the cabinet to the back plate.</p>	 <p>2. The cabinet back , remove the screws connecting the cabinet to the back plate.</p>
 <p>3. Remove the back plate. →</p>	 <p>4. Remove the screw connecting the cabinet to the door.</p>
 <p>5. Disconnect the male and female plug connectors.</p>	 <p>6. Take out the cabinet</p>
 <p>7. Remove the screw connecting the door to the back plate on the door,take out the back plate .</p>	 <p>8. Remove the led strip cable from the terminal station and take out the LED strip.</p>


2. Remove the driver

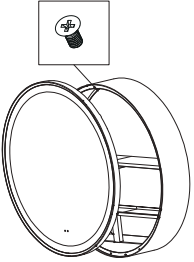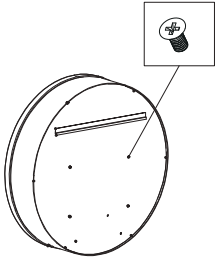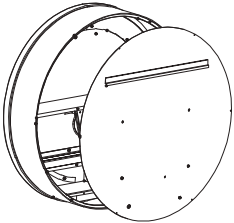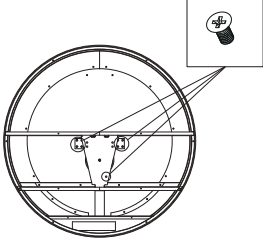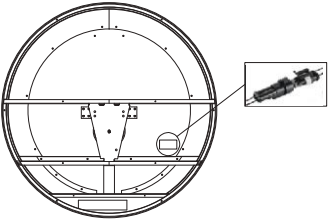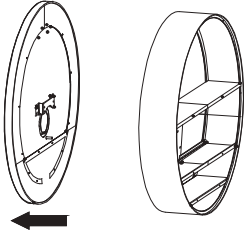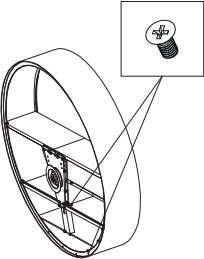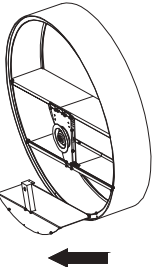 <p>1. Push the door ,remove the screw connecting the cabinet to the back plate.</p>	 <p>2. The cabinet back , remove the screws connecting the cabinet to the back plate.</p>
 <p>3. Remove the back plate. →</p>	 <p>4. Remove the screw connecting the cabinet to the door .</p>
 <p>5. Disconnect the male and female plug connectors.</p>	 <p>6. Take out the cabinet door .</p>
 <p>7. Remove the screw on electrical box of the cabinet .</p>	 <p>8. Take out the electrical box.</p>

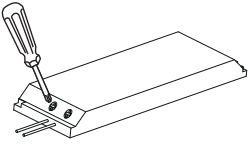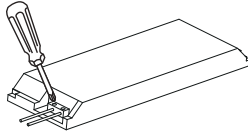 <p>9. Unscrew both ends of the led driver cover.</p>	 <p>10. Remove the wires at both ends of the led driver, Unscrew the led driver base.</p>
--	--

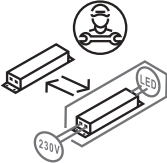

Replaceable control gear by a professional

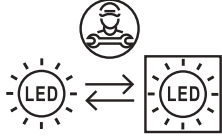

Replaceable (LED only) light source by a professional