

ASSEMBLY INSTRUCTIONS

---

Product Size

Armchair : 74Hx78Wx65D


Right Corner : 74Hx164Wx76D

Left Armchair Lounge : 74Hx164Wx76D

Coffee Table : 40Hx75Wx75D

PO Number : 2969793

Version Reference : Dec, 2021

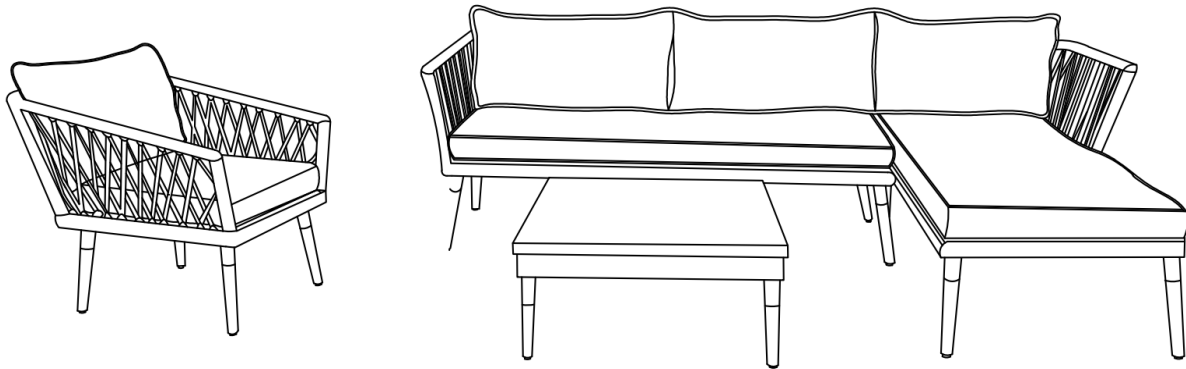

IMPORTANT: Please read the instructions in full before assembly and keep for future reference.



Assembly:

- Make sure that you have plenty of space and a clean, dry area for assembly.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent scratching.
- Check the parts and fittings received to ensure you have everything listed.
- To avoid the risk of suffocation to children and animals, dispose of plastic bags immediately.
- Keep all fittings out of the reach of children during assembly.
- Do not use power tools to construct this product, as their use could make the product unsafe and will invalidate the warranty.
- Do not over tighten screws or bolts.
- The fixings should be regularly checked and tightened as necessary.
- If fixings are found to be damaged or missing, they must be replaced before further use of the product.

Safety:

- For domestic and outdoor use only.
- This product should only be used on firm level ground
- If the glass is chipped or broken, stop using the product and consult Furniture 123
- Do not place very hot or very cold items on the glass surface, unless adequately thick table mats are used to prevent such items from coming into contact with the glass
- Do not use glass as a chopping surface.
- Do not stand on your chair.
- Do not sit on the arms of your chair.
- When moving furniture never drag the pieces across the floor, as this will cause damage to the joints

Care and Maintenance:

- When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances scratch glass panel
- Do not use scourers, abrasives (including washing powders), bleach or solvent based cleaners as they can bleach or damage the product
- Please do not leave your product outside when not in use. During bad weather and winter months the product should be dismantled and stored in a cool dry place. We recommended the use of furniture covers to protect your furniture when not in use.

---






Should your product be faulty or have missing parts then please contact our customer services department who will be happy to assist you, please have your order number and batch code or date stamp ready.




**CUSTOMER SERVICES 0871 984 1924**

BUY IT DIRECT ASSEMBLY INSTRUCTIONS  
CALL US FOR ASSISTANCE: 0871 984 1924


 



# ASSEMBLY INSTRUCTION FOR CHAIR


PART LIST			
ITEM	DESCRIPTION	PICTURE	QTY
A	SEAT FRAMES		1 pc
B	LEGS		4 pcs
C	ALLEN KEY		1 pc
D	BOLTS M6 X 30		14 pcs
E	WASHER		14 pcs
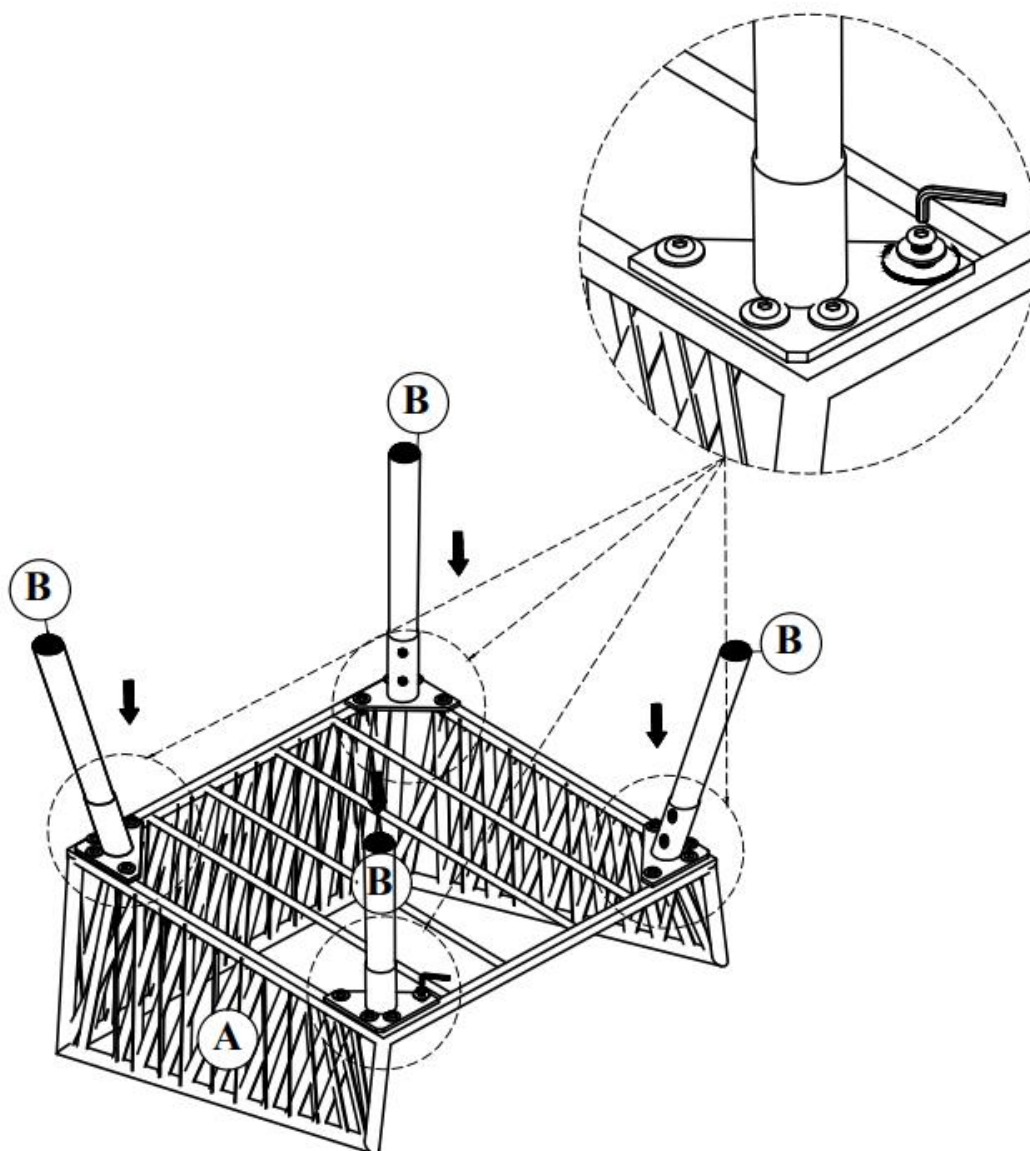
## Step 1



 


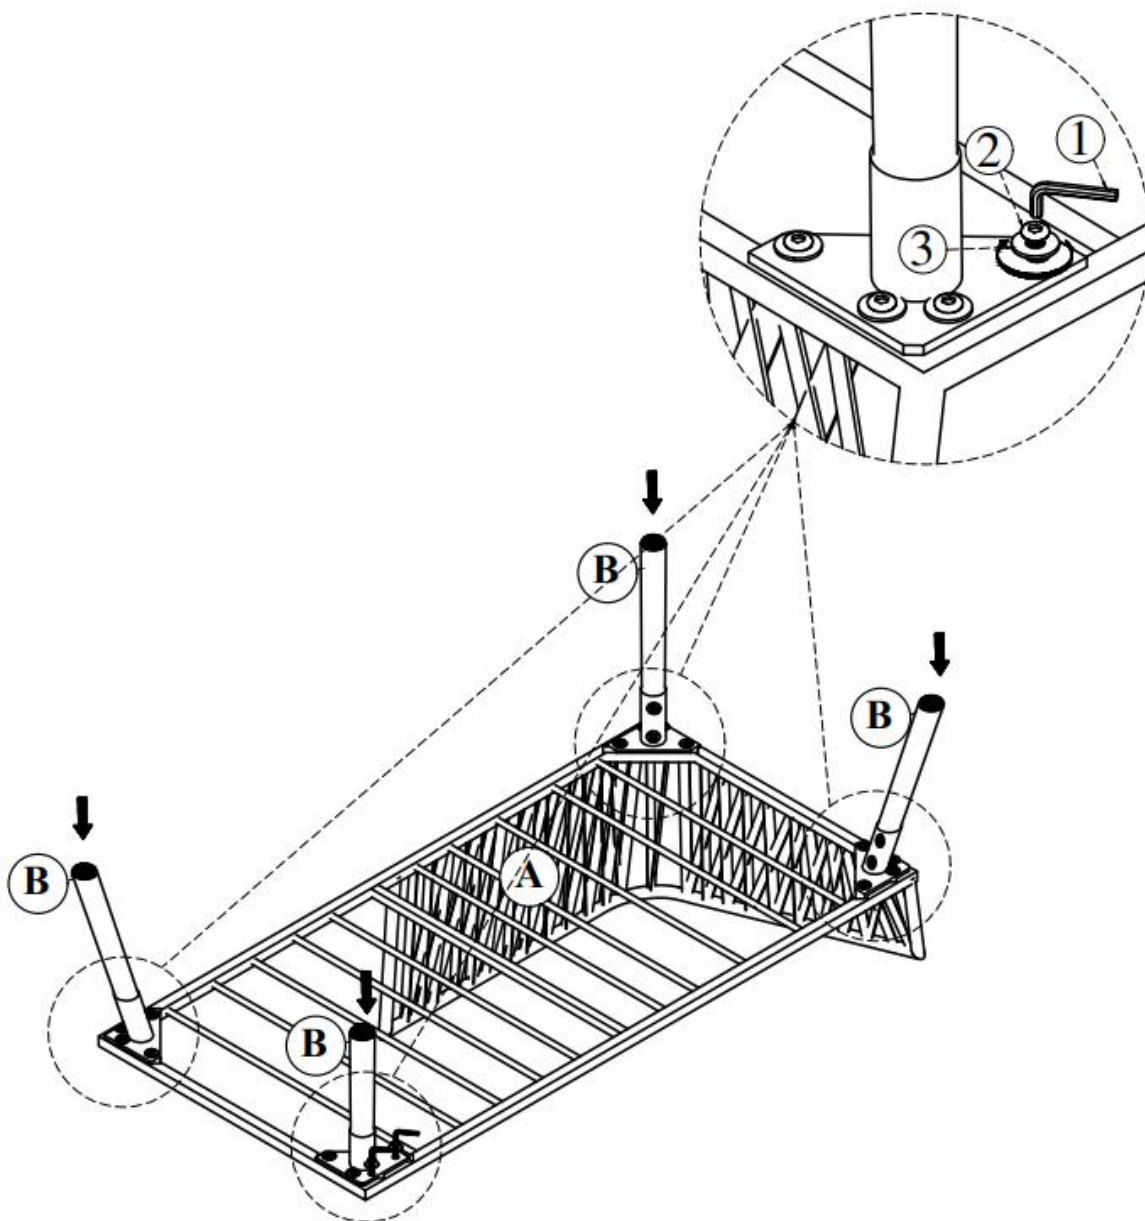

## ASSEMBLY INSTRUCTION FOR CHAISE

PART LIST			
ITEM	DESCRIPTION	PICTURE	QTY
A	SEAT FRAMES		1 pc
B	LEGS		4 pcs
C	ALLEN KEY		1 pc
D	BOLTS M6 X 30		16 pcs
E	WASHER		16 pcs



## ASSEMBLY INSTRUCTION FOR TABLE

PART LIST			
ITEM	DESCRIPTION	PICTURE	QTY
A	TABLE TOP		1 pc
B	LEGS		4 pcs
C	ALLEN KEY		1 pc
D	BOLTS M6 X 30		16 pcs
E	WASHER		16 pcs

