


料号	Z36E400-E71-02A	版本	1.0
材质	100克双胶	尺寸	175X260mm
日期	2020.08.05	页数	28
表单编号		版本	1.0

USER MANUAL

Thank you for choosing Better Bathrooms. Please read this manual before installing your product and before using it.

Better Bathrooms

FLOOR STANDING INTELLIGENT TOILET




BeBa_24912
BeBa_26881

- REMOTE CONTROL
- IPX4 INGRESS PROTECTION
- REAR AND FRONT WASH


CONTENTS

- SAFETY INFORMATION 3
- UNIT MEASUREMENTS 4
- PARTS LIST 7
- PRODUCT OVERVIEW 8
- BEFORE INSTALLATION 9
- INSTALLATION 10
- REMOTE CONTROL 16
- OPERATION 18
- CLEANING AND MAINTENANCE 24
- REPLACING THE FILTER 24
- DRAINING THE WATER TANK 25
- TROUBLESHOOTING 26
- SUPPORT 27
- TECHNICAL SPECIFICATIONS 28


TOOLS REQUIRED

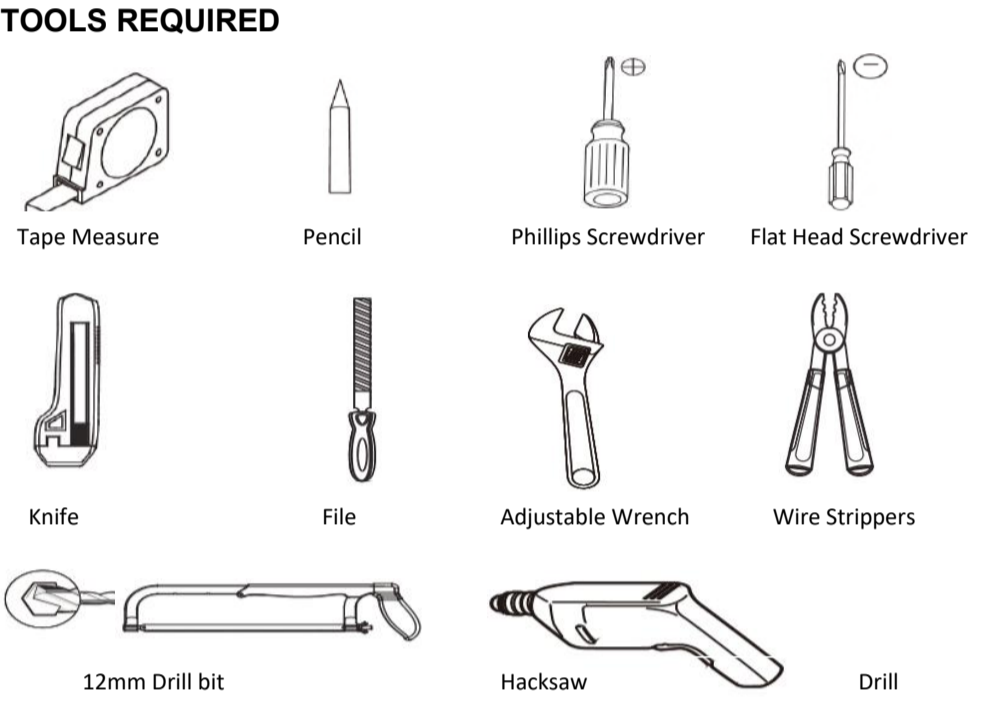

PRODUCT OVERVIEW

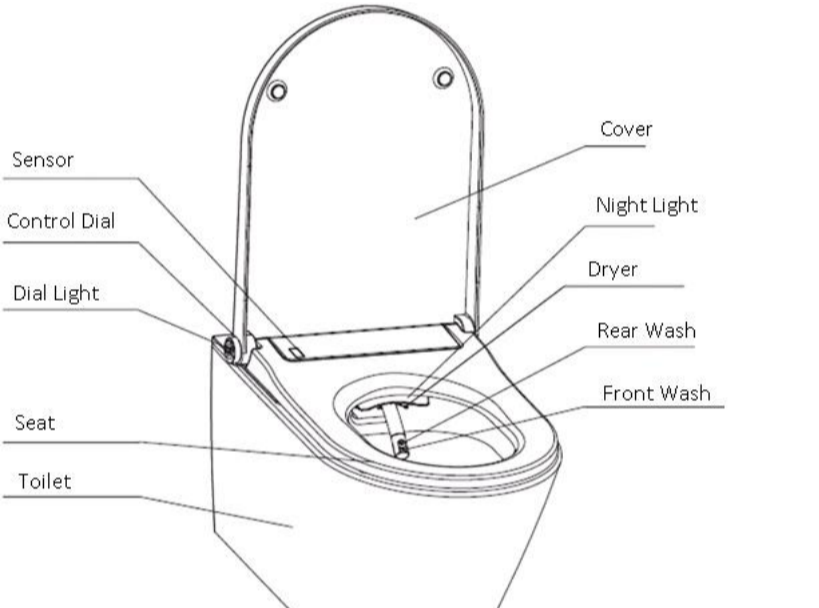

BEFORE INSTALLATION

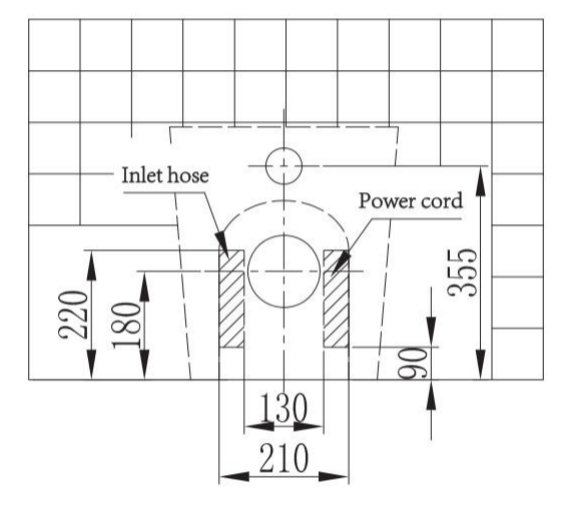

IMPORTANT!
Before commencing installation, the water and electrical supplies should be turned OFF.

Please note with your floor mounted back to wall toilet, a Flush Pipe and Waste Pipe are supplied. These may not be required as it will be dependent on the system to which the toilet is being connected and the position of the seat track.

If you are fitting the toilet to a Better Bathrooms concealed cistern, the flush pipe supplied with the toilet will not be required, as this is supplied with the concealed cistern package and can be cut to fit.

If your current seat track comes up from the floor, the waste pipe supplied with the toilet will not be suitable. A waste pipe to fit your application should be purchased.

Before attempting installation, ensure that you are in possession of all the required tools and things to ensure successful installation.

INSTALLATION OF THE REMOTE HOLDER


Clean the wall surface in the area in which the remote control holder will be located. Dry fully before attempting installation.

From the rear of the holder, peel off the adhesive strip cover.

Place the holder with the adhesive side to the wall level, press to the wall firmly and hold for a couple of seconds.

Once located and secure, place the remote control against the holder. The magnet within the holder will retain the remote in position.

REMOTE CONTROL

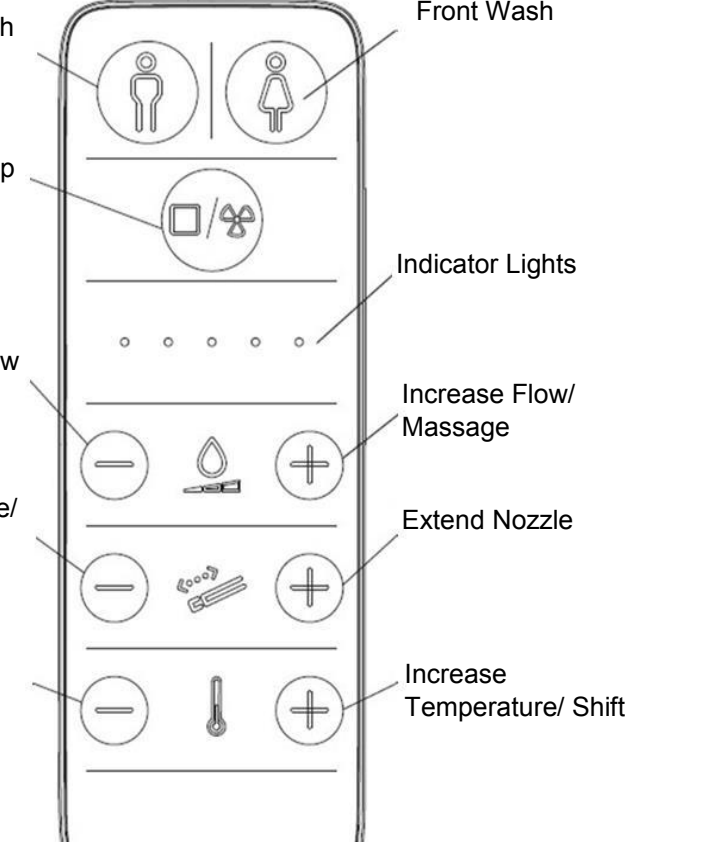

FITTING / REPLACING BATTERIES

- Different types of batteries or new and used batteries should not be mixed.
- Batteries should be inserted using the correct polarity.
- Exhausted batteries should be removed and disposed of safely.
- If the appliance is not to be used for a long period, batteries should be removed.

NOTE: Batteries are not included. The remote control requires 2 x CR2032 batteries.

When the light flashes continuously, the batteries need to be replaced.

INDICATOR LIGHT

The indicator light on the control dial is on by default. To turn it off press and hold the "+" or "-" temperature button. Then press the "Rear Wash" button. The indicator light will illuminate when the "Rear Wash" button is pressed again.

Or Open the cover and sit, without washing or drying, keep pressing the control dial for 6 seconds, the light will turn off. If pressed again for 6 seconds, the light will turn on.

MULTIPLE INSTALLATION REMOTE SETTING

If you are installing multiple units in one area and want to avoid controller interference between units. You can set each controller to be connected to an individual unit. Open both the cover and seat, do not sit on the seat and set the "Night Light" to the "Close" mode (Refer to Night Light Setting) Press the STOP button and the "+" or "-" temperature button together. The first indicator will flash. Release the STOP button, but continue to press the temperature button. Press the "+" or "-" flow rate button then release the temperature button the fifth indicator will flash. Press "+" or "-" flow rate buttons to switch to a different remote product ID code and the corresponding indicator lights will illuminate. The first code is the default code and the light "lights up".

CLEANING AND MAINTENANCE

Daily	Remove water drops with a soft lint free cloth to avoid invisible build-up.
Weekly	Clean all surfaces and corners. Clean the spray nozzle is necessary (see nozzle cleaning).
Monthly	Clean the ceramic with acidic cleaning agent.
Every 6 months	Replace the filter if required (see replacing the filter).

NOTE: Do not use strong abrasives, cleaning agents or materials, as this can damage the product and will invalidate your guarantee.

TANK SELF-CLEAN

If the product is not used for more than 72 hours, the seat time is 6 used, and the wash function is activated, the unit will carry out a self-clean at approximately 3 minutes. All nozzles will be de-activated during this time.

CLEANING THE NOZZLE

It is recommended that regular cleaning of the nozzle takes place to prevent blockages.

To manually clean the nozzle, follow the below:

Open the seat cover and seat, then rotate the control dial clockwise. The nozzle will extend, not clean with a brush to clean the nozzle holes and then wash clean. The nozzle will return after a 6-minute period or you can press the Stop button.

