

# USER MANUAL



Thank you for choosing Better Bathrooms.  
Please read this manual before installing your product  
and keep for future reference.

**better**   
**bathrooms**

## General Instruction for Freestanding Baths with Waste and Overflow Fitted



Image for installation reference only

- **Two-person assembly**
- **Tools required**
- **We always recommend using professional tradespeople to install your product**

V3\_19.03.2024

## Congratulations on your purchase

*And welcome to our growing gang of savvy shoppers*

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Awards and being placed on The Sunday Times Fast Track 100.

We hope your new product goes above and beyond your expectations. However, should any problems occur, please:

- log in to your account and contact our customer services team via your self-serve portal – [betterbathrooms.com/CustomerAccount/Login](https://betterbathrooms.com/CustomerAccount/Login)
- contact us via [betterbathrooms.com/content/contact-us](https://betterbathrooms.com/content/contact-us)

## Important information

- Please read these instructions thoroughly and retain for future reference
- Always check for pipes and cables before drilling
- Freestanding bath is not designed to take weight on the rim, Do not sit or stand on the bath rim.

## Receive Your Bath

### **Unpack and check for damage.**

After receiving your bath, please unpack and remove all covering, checking whether there is any damage. Repack the bath if it is not being immediately installed. It will be rejected any claim for damage if not notified in a timely manner.

### **Protect your bath.**

Before commencing and installation, ensure the bath is completely protected, leave covering in place until the bathroom is complete. Scratches and damage incurred during installation are not covered by the warranty.

## Tools required



Spirit Level



Wrench



Tape



Marking Pencil



Silicone Gun

## Installation

### Step 1

Adjust the bath feet until the bath base is 3mm above the floor;

This can be done by turning the feet bars accordingly;

Then use wrench to tighten the nuts on the bars. See figure 1

### Step 2


Mark the floor with the outline of the bath, at the final installation position with the marking pencil.

### Step 3

Carefully tilt the bath on its side and use flexible connector to connect the waste outlet to the trap as illustrated on figure 2.


### Step 4

Position the bath on the floor marking as marked on step 2, make sure that flexible connector is not kinked upward on installation as this will result in drainage issue.

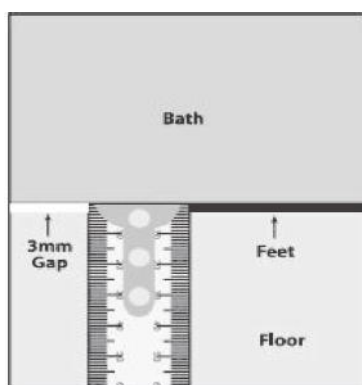

**Figure 1**

Feet set at 3mm above the floor

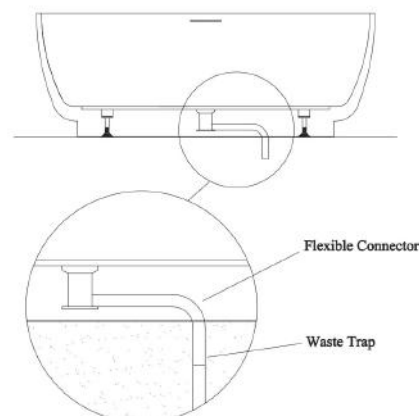

**Figure 2**

Flexible connector installation

\*\*\*Flexible connector and waste trap are not supplied

## Step 5

4

Apply silicone around the base surrounding of the bath, see figure 3.



Figure 3

\*\*\*Do not use the bath within 24 hours to let the silicone fully cure

## Troubleshooting

- Marks found on the surface could be wiped off with wet cloth and toothpaste.

## Maintenance & Cleaning

- ① To preserve the polished surface, after using your bath, clean with soft cloth and warm soapy water to wash away any body oils or soap residue that forms a ring tide mark.
- ② Do not use powders, pastes, crème cleaners, thinners, window cleaning sprays or dry cleaning liquid, etc.
- ③ When coloured essentials oils are used, first test that the colour won't stain your bath. Always add oils into a bath full of water. Never pour them into an empty bath.

## Water testing

Water test your bath prior to enclosing to ensure it drains correctly as no claims for non-draining baths will be valid after enclosing or tiling has been done;  
Water test overflow pipe and waste to ensure they are not leaking.

## ! Warning

The pre-fitted waste has NOT yet been fully installed.

Please use a qualified installer to secure it to the bath to avoid any water leaking.

Before use please test the bath to ensure the waste has been properly installed.

"PLEASE NOTE THE BATH WASTE/PLUG AND OVERFLOW ARE PREFITTED TO THE BATH"  
" THE BATH TRAP (BATH WASTE TO WASTE PIPE FITTING) IS NOT SUPPLIED"  
"IF THE WASTE/PLUG IS NOT FITTED, A HOLE WILL BE VISIBLE IN THE BASE OF THE BATH"  
"AN IMAGE OF THE PRODUCT WILL BE REQUIRED IF MAKING A REQUEST FOR A MISSING WASTE"

Waste fitted under bath



Waste/Plug inside the bath



### For more information

- visit [betterbathrooms.com](http://betterbathrooms.com)
- email [customerservices@buyitdirect.co.uk](mailto:customerservices@buyitdirect.co.uk)
- call 0330 390 3062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA

**better**   
**bathrooms**

Part of the BuyItDirect Group