

9899 Bath Filler Overflow


1



2



3

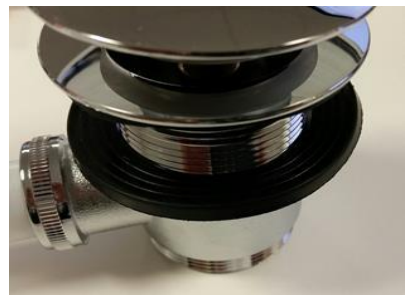

1. From the underside of the bath place the flat washer on top of the bath waste body.
2. From the top side fit the angled washer to the waste flange section, then push this through the hole in the bath to connect to the waste body.
3. Engage the thread and screw into position until tight.

4



4. Depending on whether you are fitting a hot and cold feed or mixed feed, will depend on how many of the blanking caps need to be removed
If mixed feed, remove only one as shown above.

5



6



7



5. Place the large washer onto the overflow/filler section of the waste
6. PTFE needs to be applied to the threaded tail of the overflow/spout, this should be applied so that it creates a water tight seal and allows for the section to be tight against the bath face and pointing downwards.
7. Fit the rubber washer inside the overflow/spout and screw into position
8. Finally connect your supply pipe to the filler using a 1/2" male connector (not supplied)