


# USER MANUAL




Thank you for choosing Better Bathrooms.  
Please read this manual before installing your product  
and keep for future reference.

**better**   
**bathrooms**

**Kobe/Cali 1200mm Curved Solid Surface Inset Basin / Kobe/Cali 1400mm Curved Solid Surface Inset Basin**

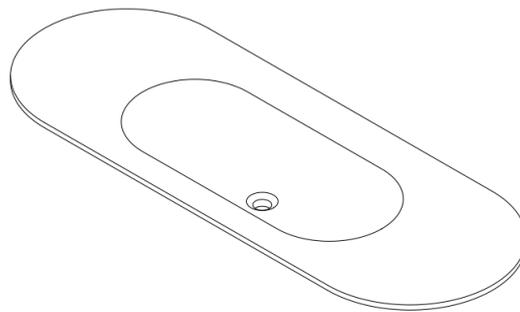


**Kobe 1200mm Curved Fluted Wall Hung Vanity Unit / Kobe 1400mm Curved Fluted Wall Hung Vanity Unit**

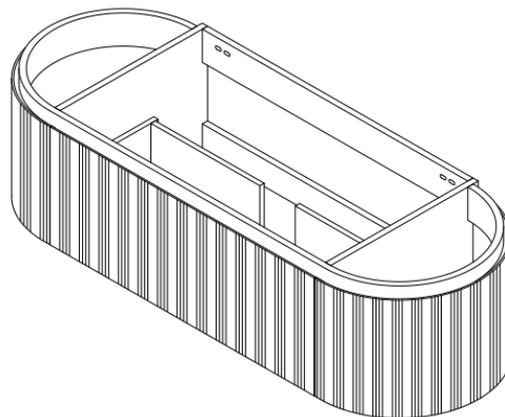

**Cali 1200mm Curved Wall Hung Vanity Unit**

/

**Cali 1400mm Curved Wall Hung Vanity Unit**

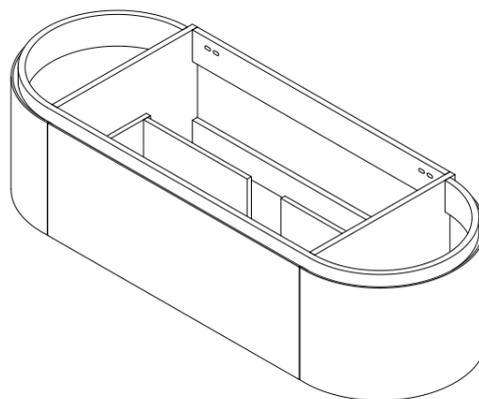

- **Three-person assembly**
- **Tools required**
- **We always recommend using professional tradespeople to install your product**

V1\_26.11.25

# Congratulations on your purchase

*And welcome to our growing gang of savvy shoppers*

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Awards and being placed on The Sunday Times Fast Track 100.

We hope your new product goes above and beyond your expectations. However, should any problems occur, please:

- log in to your account and contact our customer services team via your self-serve portal – [betterbathrooms.com/CustomerAccount/Login](https://betterbathrooms.com/CustomerAccount/Login)
- contact us via [betterbathrooms.com/content/contact-us](https://betterbathrooms.com/content/contact-us)

## Important information

- Please read these instructions thoroughly and retain for future reference
- Waste pipe are not supplied.
- To check for cables and pipes before drilling.
- The room must be well ventilated and the unit must be wiped to remove splashes and standing water.
- The structure being used to hang the unit must be strong enough to hold the product.
- The screws and plugs provided are for solid walls only and suitable fixings must be used for other wall types.
- The weight limit of the bathroom cabinet is 50kgs;the weight limit of the drawers is 20 kgs.
- During the installation process, please cover (wrap) the product with soft materials to prevent damage to it during the installation.

# Contents

- Component Listing
- Technical Drawing
- Tools Required
- Installation Instructions
- Maintenance, Care & Cleaning

## Component Listing

1. Basin & Vanity Unit

2.IM

3.Waste


4.Expansion bolts & Expansion screws

1200mm: x 6 sets


1400mm: x 6 sets

# Technical Drawing


## Kobe/Cali 1200mm Curved Solid Surface Inset Basin

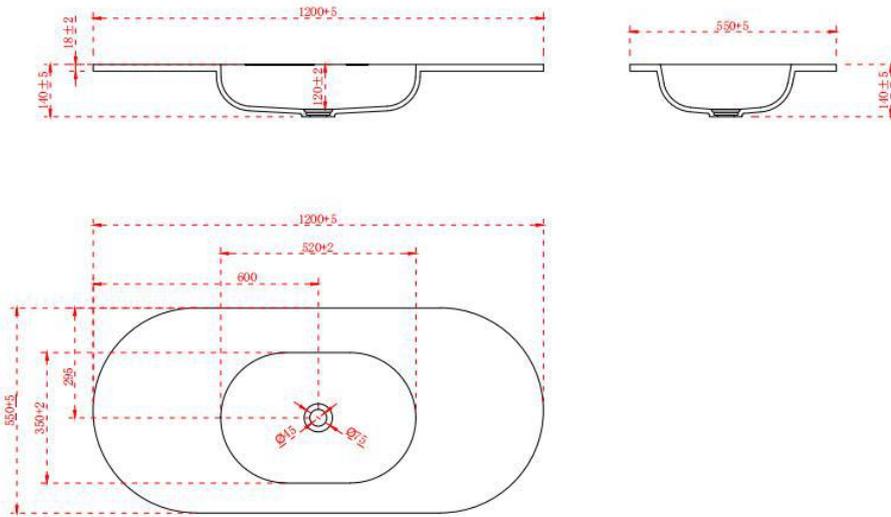


## Kobe/Cali 1400mm Curved Solid Surface Inset Basin

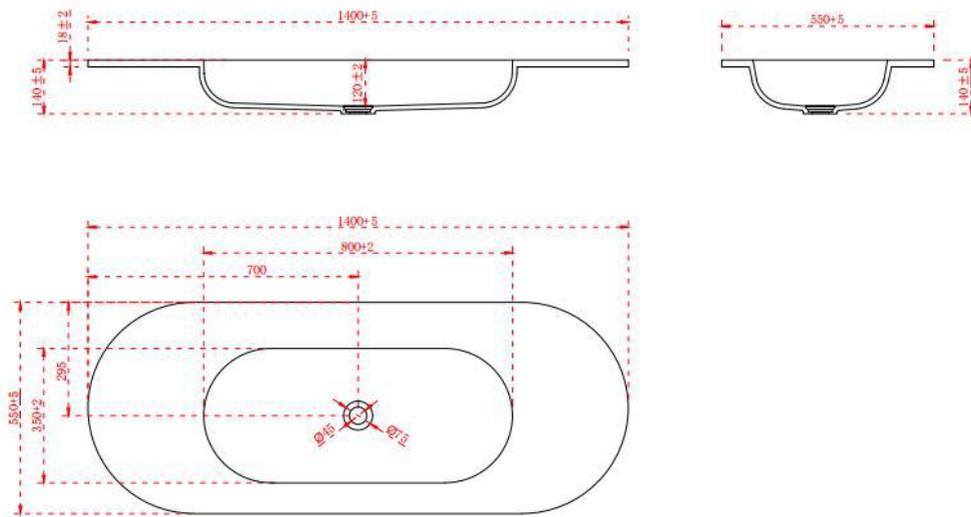


## Kobe 1200mm Curved Fluted Wall Hung Vanity Unit

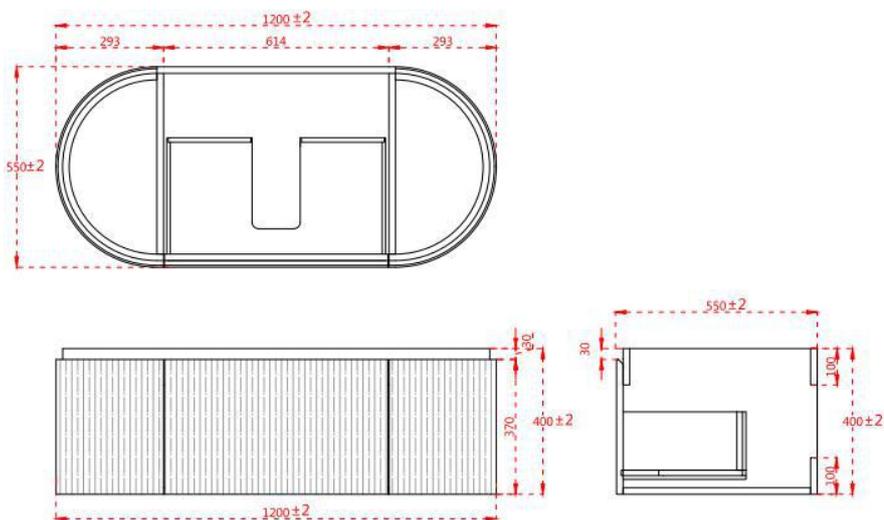


**Kobe 1400mm CurvedFluted Wall Hung Vanity Unit**

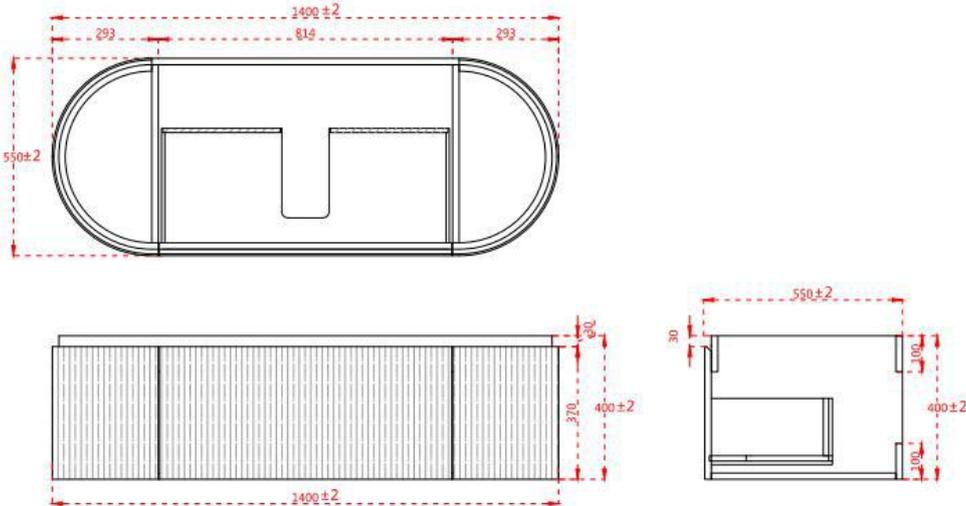

**Cali 1200mm Curved Wall Hung Vanity Unit**

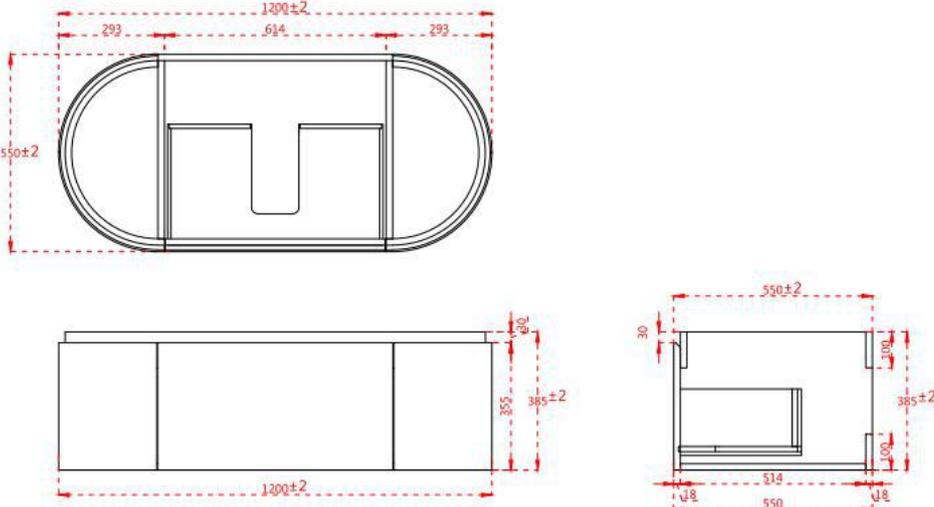

**Cali 1400mm Curved Wall Hung Vanity Unit**

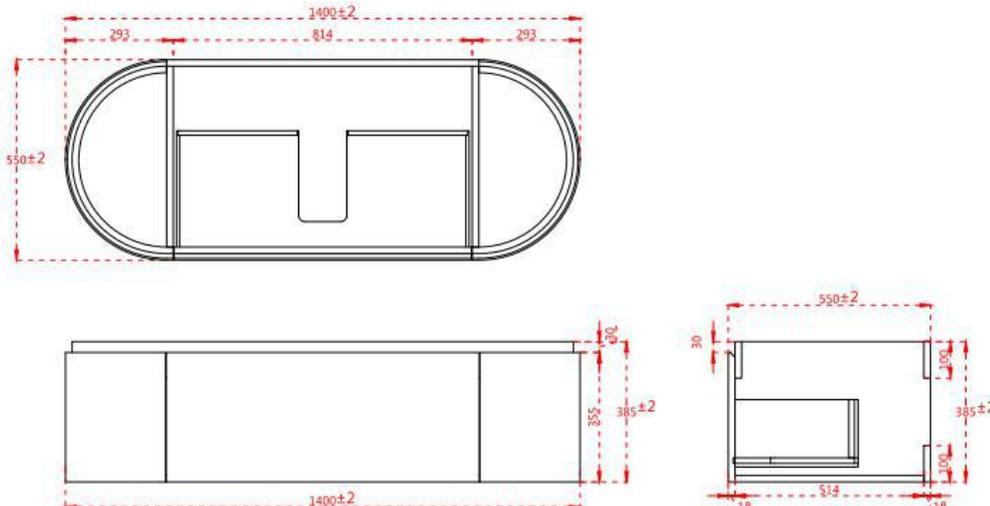

# **Tools Required**

1.Silicone Adhesive

2.Spirit level


3.Tape measure

4.Power drill



5.Screwdriver

# Installation Instructions




1) Open the package and take out the product.

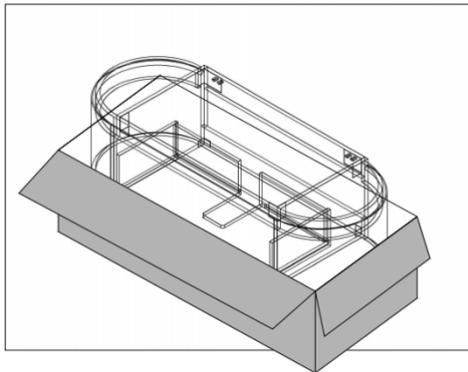

2) Prepare the tools and check the levelness of the wall. Confirm the installation location. Use a level to check if the installation holes are at the same level. Use an electric drill to make holes in the wall to pre-embed the expansion bolt after confirming the location is accurate. Use the **screwdriver** to fix the bathroom cabinet to the wall with the expansion screws.

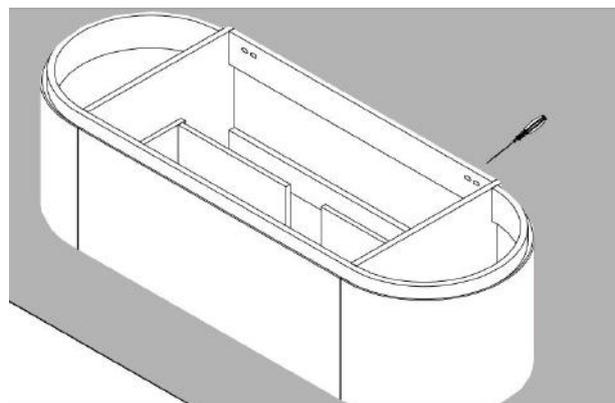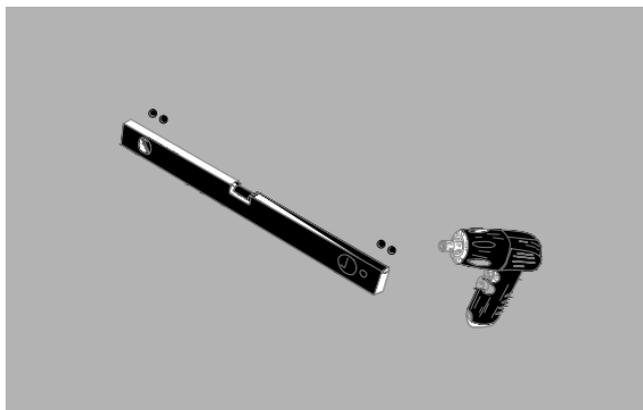

3) Install the waste into the basin, then use **the sealant** to seal the edges along the wall. And leave it to stand for 24 hours before using.

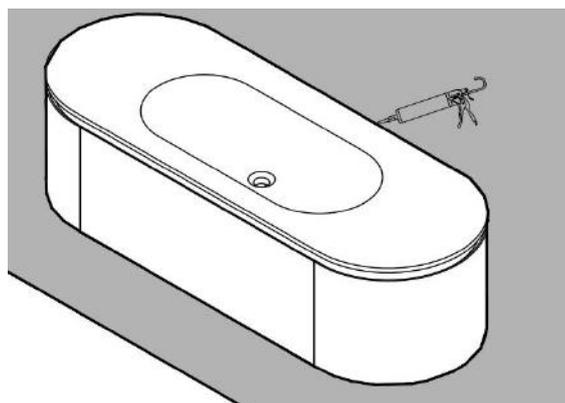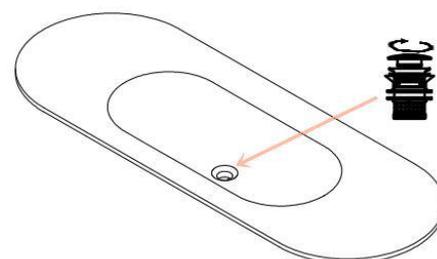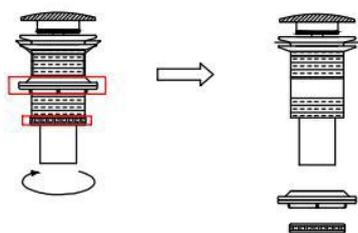

# Maintenance, Care & Cleaning

1. For regular cleaning of both Glossy or Matte finishes, we recommend using widely available cleaning products. The Matte finish may occasionally require a mildly abrasive product.

2. Wipe surface with a soft cloth after each use.

To use a mild cleaning product.

For more stubborn stains, use a mildly abrasive cream cleanser.

3. Stubborn Stains, Scratches, and Damaged Surfaces

To repair/remove stubborn stains, scratches, smudges, and scuffs:

1) Use water to remove dirt and dust from the surface.

2) Use 800 grit sandpaper and sand lightly in small circular motions.

3) Follow with 1200 grit sandpaper (finer-grit) sanding lightly in small circular motions until smooth.

4) Dry with a towel.

5) For the Glossy finish, polish the surface with a cloth and a polishing compound for automobiles, such as 3M Extra Cut Compound.

## Care Instructions

Wipe surface with a soft cloth after each use.

To use a mild cleaning product.

For more stubborn stains, use a mildly abrasive cream cleanser.

### ***For more information***

- visit [betterbathrooms.com](http://betterbathrooms.com)
- email [customerservices@buyitdirect.co.uk](mailto:customerservices@buyitdirect.co.uk)
- call 0330 390 3062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA

**better**   
**bathrooms**

Part of the BuyItDirect Group