


led driver and led strip of cabinet removal instruction



TURN OFF ELECTRCITY SUPPLY BEFORE WORK IS CARRIED OUT

LED driver removal step, choose the structure of your cabinet:


Structure A:

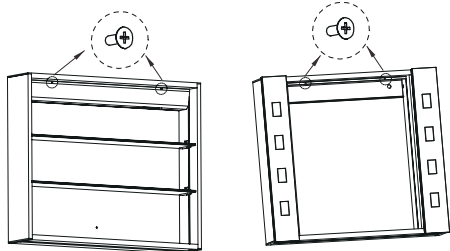


1. Firstly unscrew the electrical box of the cabinet. 2. Remove the cover of the electrical box.

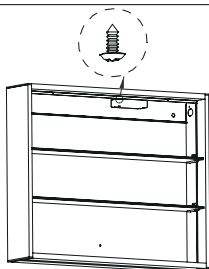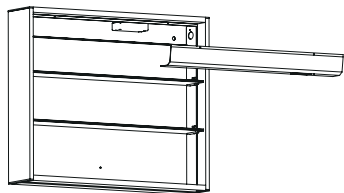


3. Unscrew the led driver, adjust or take off the glass shelf if necessary.

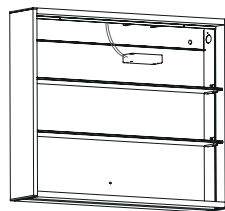

4. Remove the led driver and replace it.

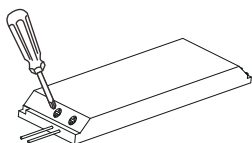


5. Unscrew both ends of the led driver cover.

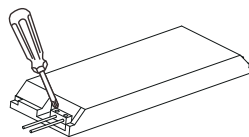


6. Remove the wires at both ends of the led driver, Unscrew the led driver base.


Structure B:

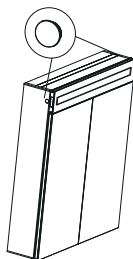


1. Remove the cap.

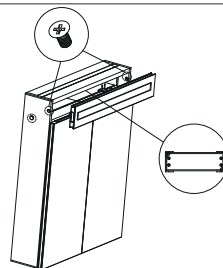

2. There are screws inside, unscrew and take off the cover of the light box, unscrew and remove the driver.

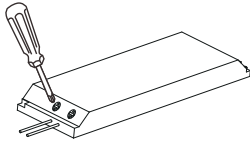


3. Unscrew both ends of the led driver cover.

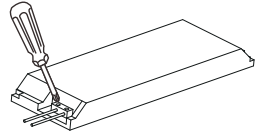


4. Remove the wires at both ends of the led driver, Unscrew the led driver base.

LED strip removal step, choose the structure of your cabinet:


Structure A, the LED inside the cabinet door :

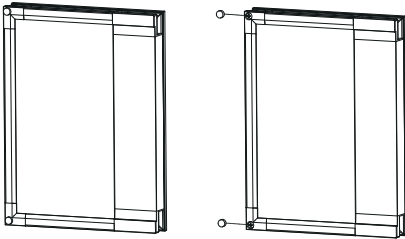


1. Remove the door of cabinet, then remove the silicone pad of inside mirror.

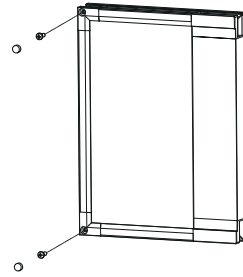


2. Remove the corner connecting parts' screw.

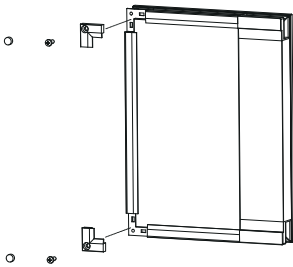


3. Remove corner connecting parts.

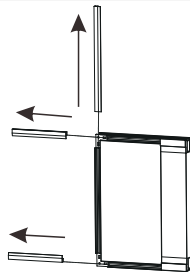

4. Take out the aluminum covers (note the direction).

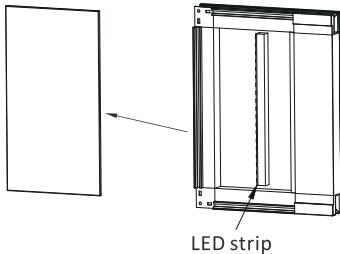


5. Remove the inside mirror.

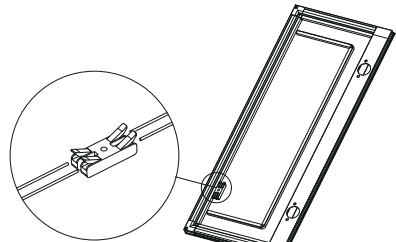

6. Open the connector and pull out the wire, then remove the LED light strip.


Structure B, the LED inside the PC bar:

PC bar with screw

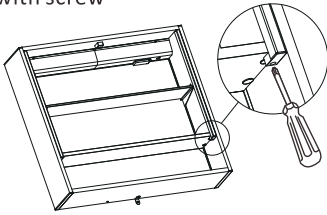


1-A. Unscrew and remove the cap of the PC bar.


PC bar without screw

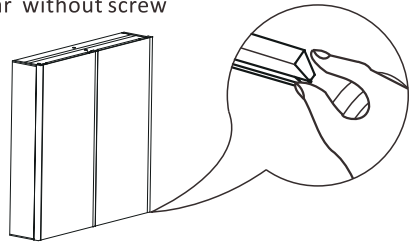


1-B. Pinch the PC cover of the bottom with hand.

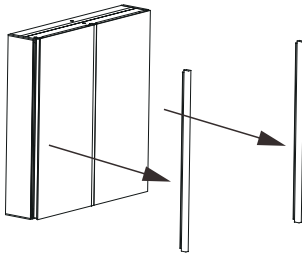


2. Remove the PC bar.

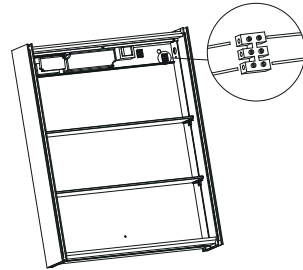

3. Unscrew and open the electrical box, unscrew and pull out the wire of the LED light strip.

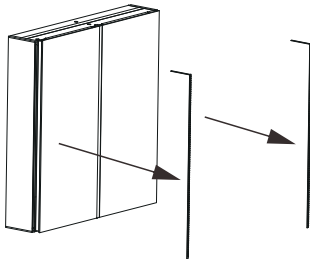


4. Take out the led strip.

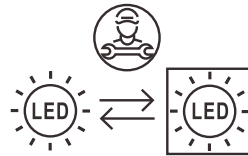


Replaceable (LED only)
light source by a professional


Structure C, the LED inside the light box:

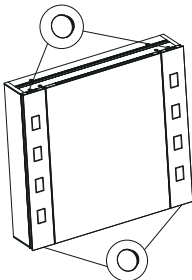

1. Remove the cap.

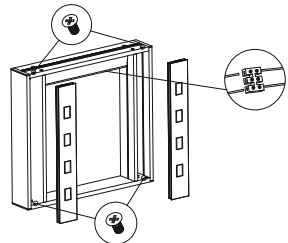


2. There are screws inside, unscrew and take off the cover of the light box, unscrew and pull out the wire of the LED light strip inside the electrical box.

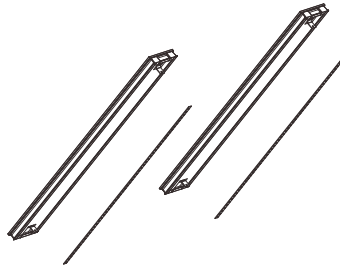


3. Then take off the LED light strip.


Structure D, the LED inside the light box:

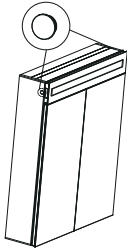


1. Remove the cap.

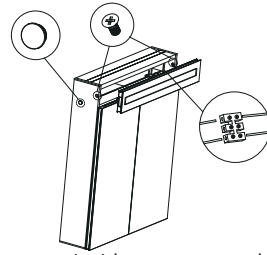

2. There are screws inside, unscrew and take off the cover of the light box, unscrew the wire of the LED light strip.

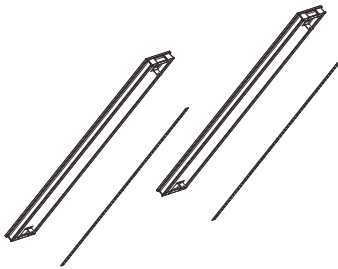

3. Then take off the LED light strip.

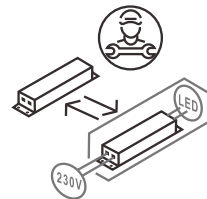

Replaceable control gear
by a professional

This product contains a light source of energy efficiency class 'F'

The pictograms are available in .jpg and eps format through the following link:

<https://www.lightingeurope.org/guidelines>.