
# 148 mm

### CONCEALED THERMOSTATIC SHOWER MIXER VALVE **INSTALLATION & MAINTENANCE INSTRUCTIONS**

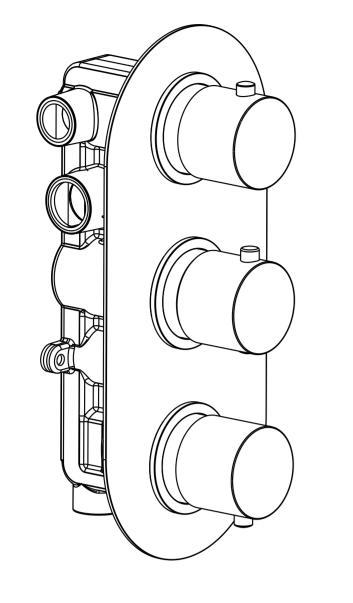

### **READ BEFORE INSTALLATION**

1.Before installation begins please check contents of completeness according the list below, If any missing or defect, please contact with the seller immediately.


2. The main part of the product has been tested and debugged by the factory, please do not disassemble by yourself, so as not to affect the performance.

3.We recommend that the product is installed by a qualified plumber. Hot and cold water pipes must comply with the valve markings, left HOT & right COLD. Otherwise, product cannot operate effectively. 4.Before installation begins please check for pipework, it is good practice to flush pipework for a few minutes before installing valve to minimise the chances of debris blocking damaging the valve. 5.Water pressure requirement: 0.5-5.0BAR (0.05-0.5MPa). Water temperature recommended:

Cold supply: MAX25°C Hot supply: 55-65°C 6. This product is suitable for all plumbing systems, preferably balanced. Max. supply pressure differential requirement is 5:1, hot or cold pressure must be reduced or boosted so as to work within the required range.


7.When the product is used in the environment of less than 4°C, pay attention to prevent the product from freezing and cracking.

### Tools Required (Not supplied)

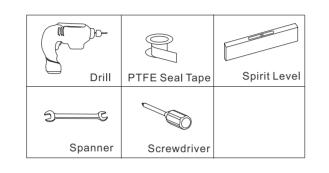



MIXED WATER OUTLET

 $\bigcirc$ 

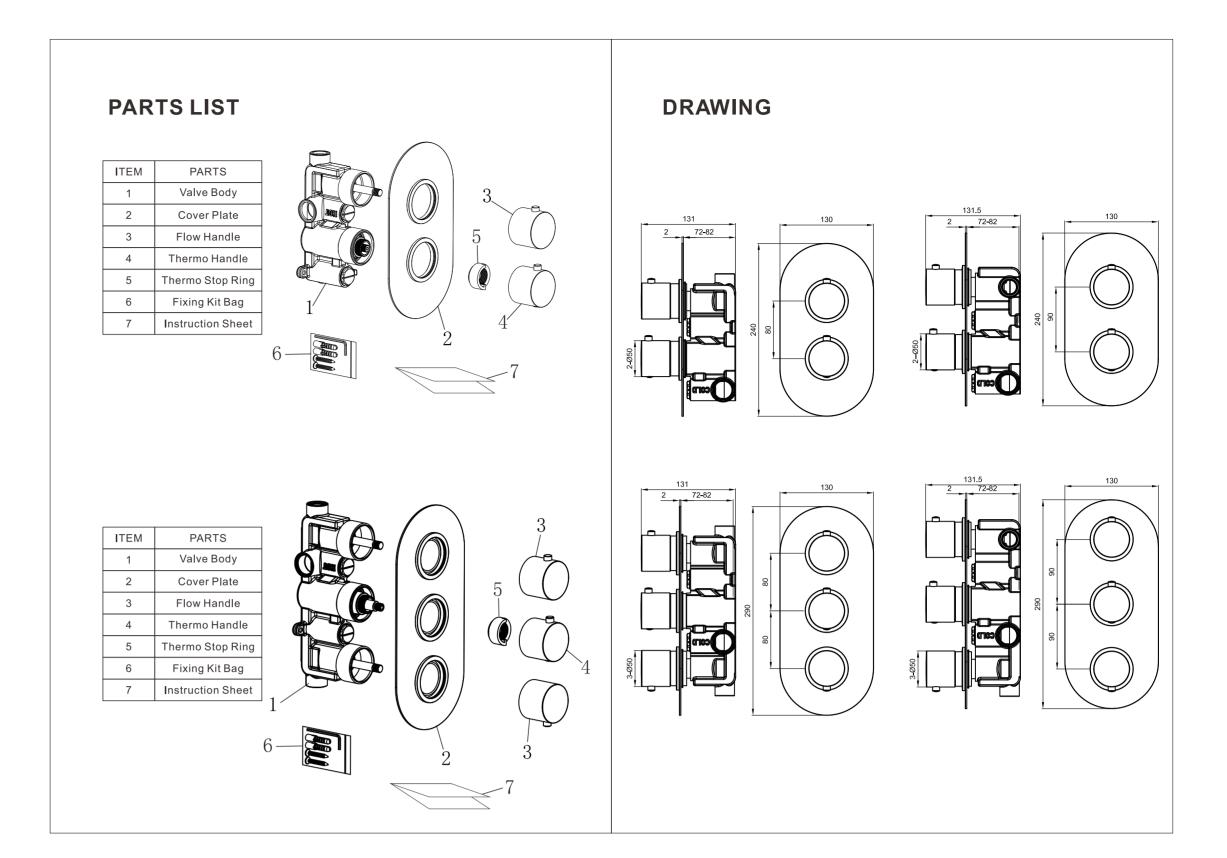



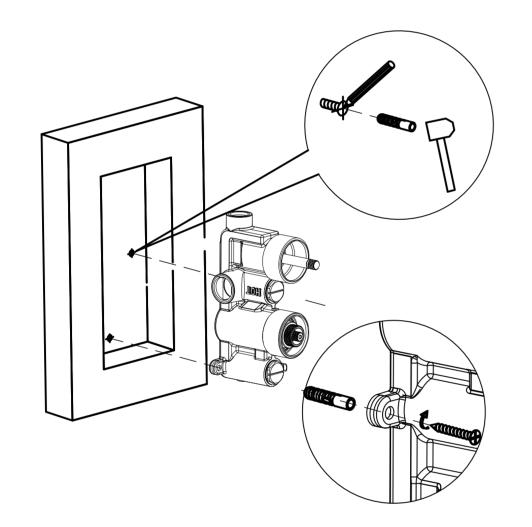

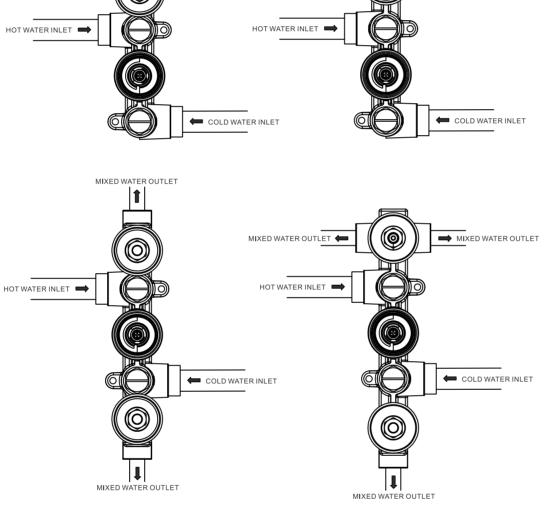


MIXED WATER OUTLET


MIXED WATER OUTLET


1.Determine the mounting position for the valve, refer to installation dimension drawings, reserve the recess in the wall in which to mount the valve, the depth of the recess should be min 72mm, max 82mm. Fix the valve with tapping screws and wall plugs.

2.Connect the valve with the hot and cold water pipes (cold and hot water shall not be connected to the opposite, otherwise, it cannot be operated correctly), connect the mixed water outlets to the shower head, handset, or spray head, and check whether the joints are leaking.

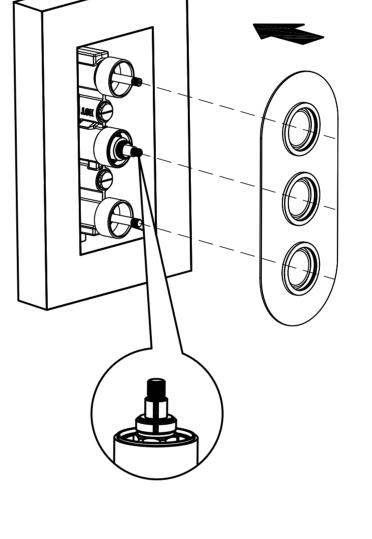

3.Check if the marking line of the thermostatic cartridge are aligned, and then put on the cover plate.

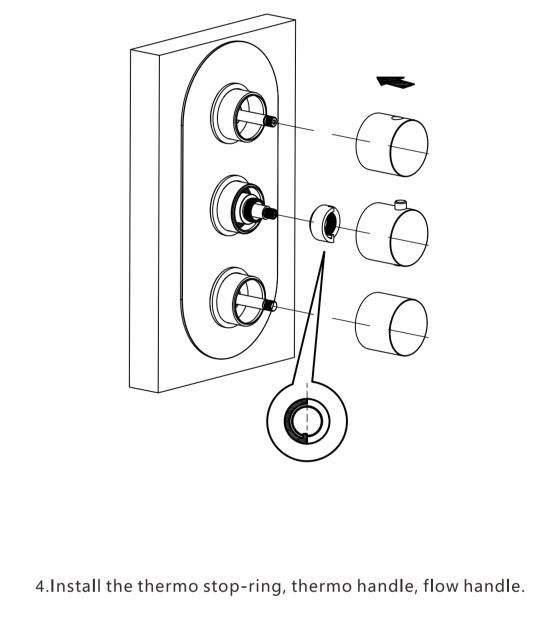

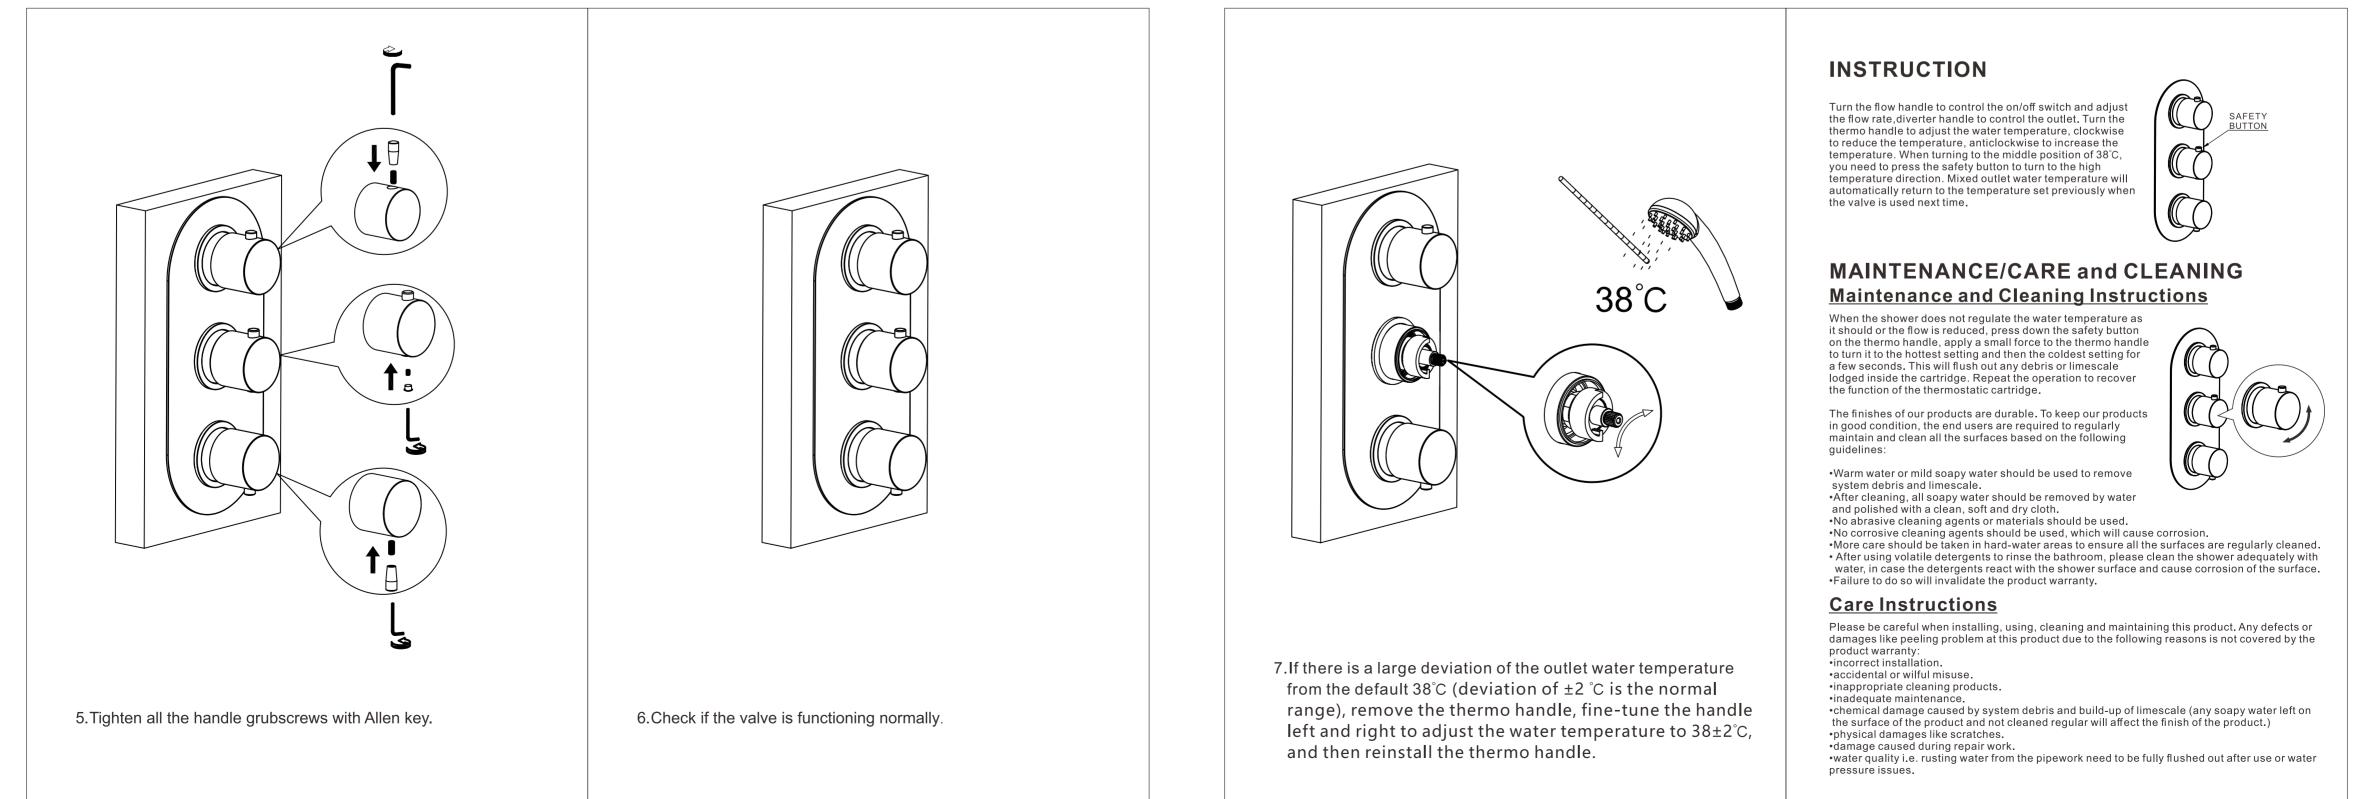

## Maintenance/ Care and Cleaning Instruction

### **Maintenance and Cleaning Instructions**

The finishes of our products are durable. To keep our products in good condition, the end users are required to regularly maintain and clean all the surfaces based on the following guidelines:

- Warm water or mild soapy water should be used to remove system debris and limescale.
- After cleaning, all soapy water should be removed by water and polished with a clean, soft and dry cloth.
- No abrasive cleaning agents or materials should be used.
- No corrosive cleaning agents should be used, which will cause corrosion.
- More care should be taken in hard-water areas to ensure all the surfaces are regularly cleaned.
- Failure to do so will invalidate the product warranty.

### **Care Instructions**

Please be careful when installing, using, cleaning and maintaining this product. Any defects or damages like peeling problem at this product due to the following reasons is not covered by the product warranty:

- incorrect installation.
- accidental or wilful misuse.
- inappropriate cleaning products.
- inadequate maintenance.
- chemical damage caused by system debris and build-up of limescale (any soapy water left on the surface of the product and not cleaned regular will affect the finish of the product.)
- physical damages like scratches.
- damage caused during repair work.
- water quality i.e. rusting water from the pipework need to be fully flushed out after use or water pressure issues.