

Thank you for choosing Better Bathrooms.
Please read this manual before installing your product
and keep for future reference.

**better
bathrooms**


Brushed Brass Stainless Steel Foldable Grab Rail-Arissa

Matt Black Stainless Steel Foldable Grab Rail -Arissa

Bronze Stainless Steel Foldable Grab Rail-Arissa

Gunmetal Stainless Steel Foldable Grab Rail -Arissa

Chrome Folding Bathroom Grab Rail600 x160mm - Arissa

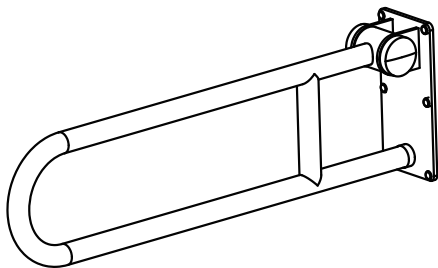

ARIBB600FGR

ARIMB600FGR

ARIBR600FGR

ARIGM600FGR

ARIC600FGR

- WALL MOUNTED ACCESSORIES
- STAINLESS STEEL 304

V20260409

CONGRATULATIONS ON YOUR PURCHASE

Our aim at Better Bathrooms is to bring you extraordinary bathroom products, for less.

If you're after a modern, traditional, or a totally unique style bathroom, we have the fittings and fixtures to bring your ideas to life, so you can fall in love with your space every day.



We hope you're happy with your new product. But if you experience any problems, we're always here to help.

- Call our friendly UK call centre on **0330 390 3062**
(Lines open 9am-4.30pm Monday to Friday, or 9am-2pm Saturday).
- Send us a message via **[betterbathrooms.com](https://www.betterbathrooms.com)**.


CONTENTS

PARTS SUPPLIED	3
TOOLS REQUIRED	3
INSTALLATION	4
CLEANING AND MAINTENANCE	5


PARTS SUPPLIED

	
SCREWS (6)	WALL PLUGS (6)


TOOLS REQUIRED

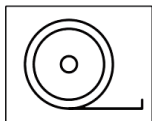

TAPE MEASURE

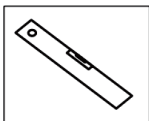


SPIRIT LEVEL

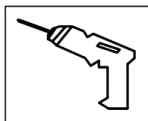


ELECTRIC DRILL




FLAT HEAD
SCREWDRIVER

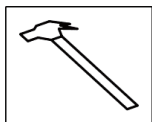

HAMMER

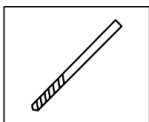

8mm DRILL BIT

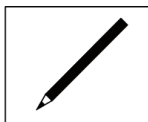

PENCIL

INSTALLATION


Always check for hidden pipes or cables before drilling to avoid damage.

The fixing plate (attached to the grab rail) must be secured into a suitable structure that is strong enough to support the product and load.

The included screws and wall plugs are designed for solid wall structures such as brick and concrete, for any other wall type use a suitable fitting.


Select Location & Mark Drill Holes

Choose the desired location for the grab rail. Hold the fixing plate (attached to the grab rail) against the wall. Then, use the fixing plate as a guide to mark the drill-hole positions on the wall.

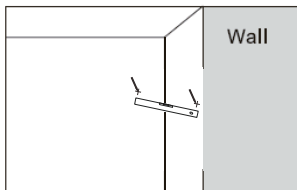


Drill Holes

Use a suitable drill bit to create holes at the marked positions. If installing on a masonry wall, ensure you have appropriate screws and wall plugs

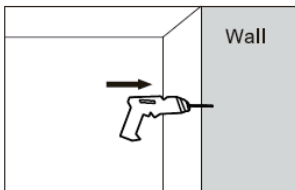


Insert Wall Plugs

Place wall plugs into the drilled holes.

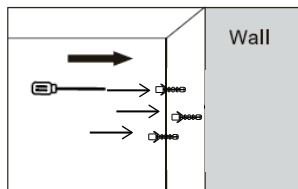

Secure the Grab Rail

Line up the fixing plate with the wall plugs. Put the screws into the plugs and tighten them up. Make sure the grab rail is installed firmly and securely.

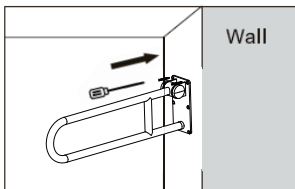

CLEANING AND MAINTENANCE

Never use products containing bleach or abrasive cleaners, as this will harm the product's appearance and lifespan.

Use a clean microfibre cloth to clean the handrail.

For more information

- visit betterbathrooms.com
- email support@betterbathrooms.com
- call 0330 390 3062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA