


USER MANUAL



Thank you for choosing Better Bathrooms.
Please read this manual before installing your product
and keep for future reference

better
bathrooms


Product name - Traditional Slide Rail Kit with Handset
Product code - BeBa_26746

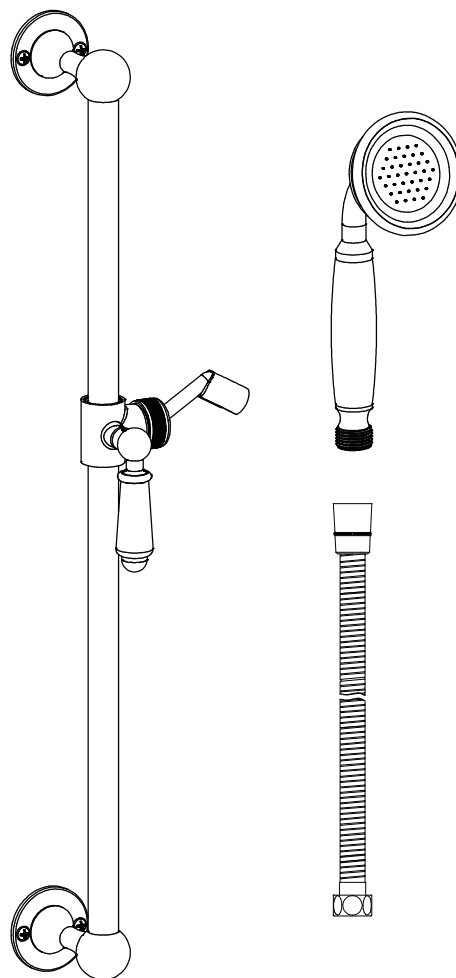

- **Single-person assembly**
- **We always recommend using professional tradespeople to install your product**

V1_25.11.2020

Installation

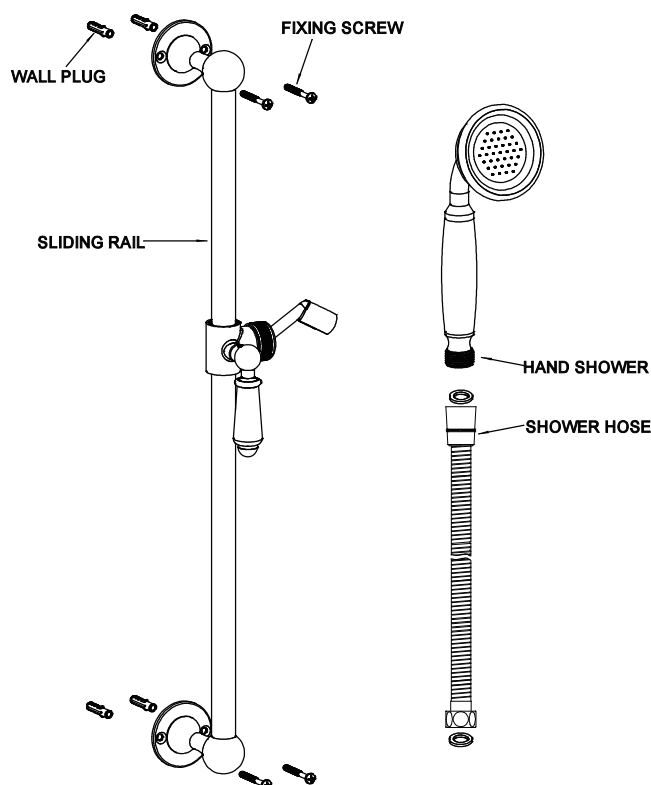

1. Locate the rail on the wall ensuring that when the hand shower is at its highest point the hose is not under tension, also ensuring the rail is vertical using a spirit level.
2. Once this is done, place the wall brackets on each of the rail and mark the position of the fixing holes.
3. Drill the wall 8mm dia and to 45mm depth and insert the wall plugs
4. Fit the slider bracket/hand shower holder to the rail ensuring the hand shower holder on the rail has the wider opening facing upwards.
5. The hand shower should be connected to the cone end of the hose, ensuring to fit the seals and the nut end to the mixer, then tighten.

CLEANING

To maintain the surface of your product, wipe with a clean damp cloth and wipe dry. Do not use abrasive cleaning agents or materials which can strip and scratch the surface; the use of these agents or materials can invalidate your guarantee. It is recommended to wipe and dry on a regular basis.

For more information

- visit betterbathrooms.com
- email customerservices@buyitdirect.co.uk
- call 03303903062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA.

better 
bathrooms

Part of the BuyItDirect Group